Configuring the ME-RC50 for Flooded Batteries

Push **METER** once or twice, until set-up options appear

Turn dial to: 05 BM: Setup > BM Amp Hours > Set to _____ Push **SETUP** once or twice, until set-up options appear 01 Search Watts Search = OFF 02 LowBattCutOut LBCO = 10.5VDC03 Absorb Time Absorb Hrs= 2.5 04 Battery Type BatType=Custom Absorb = 14.6VFloat = 13.2VEqualize= 15.2V 05 Charge Rate Max Charge=80% Set this to 100% if charging with your generator to reduce runtime. 06 VAC Dropout If running heavy AC Loads, dial down to 30%. Dropout= 80VAC 07 Power Save Arbitrary, based on customer preferences PwrSave = 5min 08 Screen Setup Arbitrary, based on customer preferences Contrast = 60%Brightness= 80% 09 Final Charge Final = Multi 10 Pwr Up Always Pwer Up = NO

NOTE: For trailers, some vehicle tow packages do not include a battery isolator. Without this isolator the house battery bank will drain into the lead acid starter battery. To prevent this, disconnect the trailer while parked until an isolator is installed in the towing vehicle.