




Shunt Connection Guide

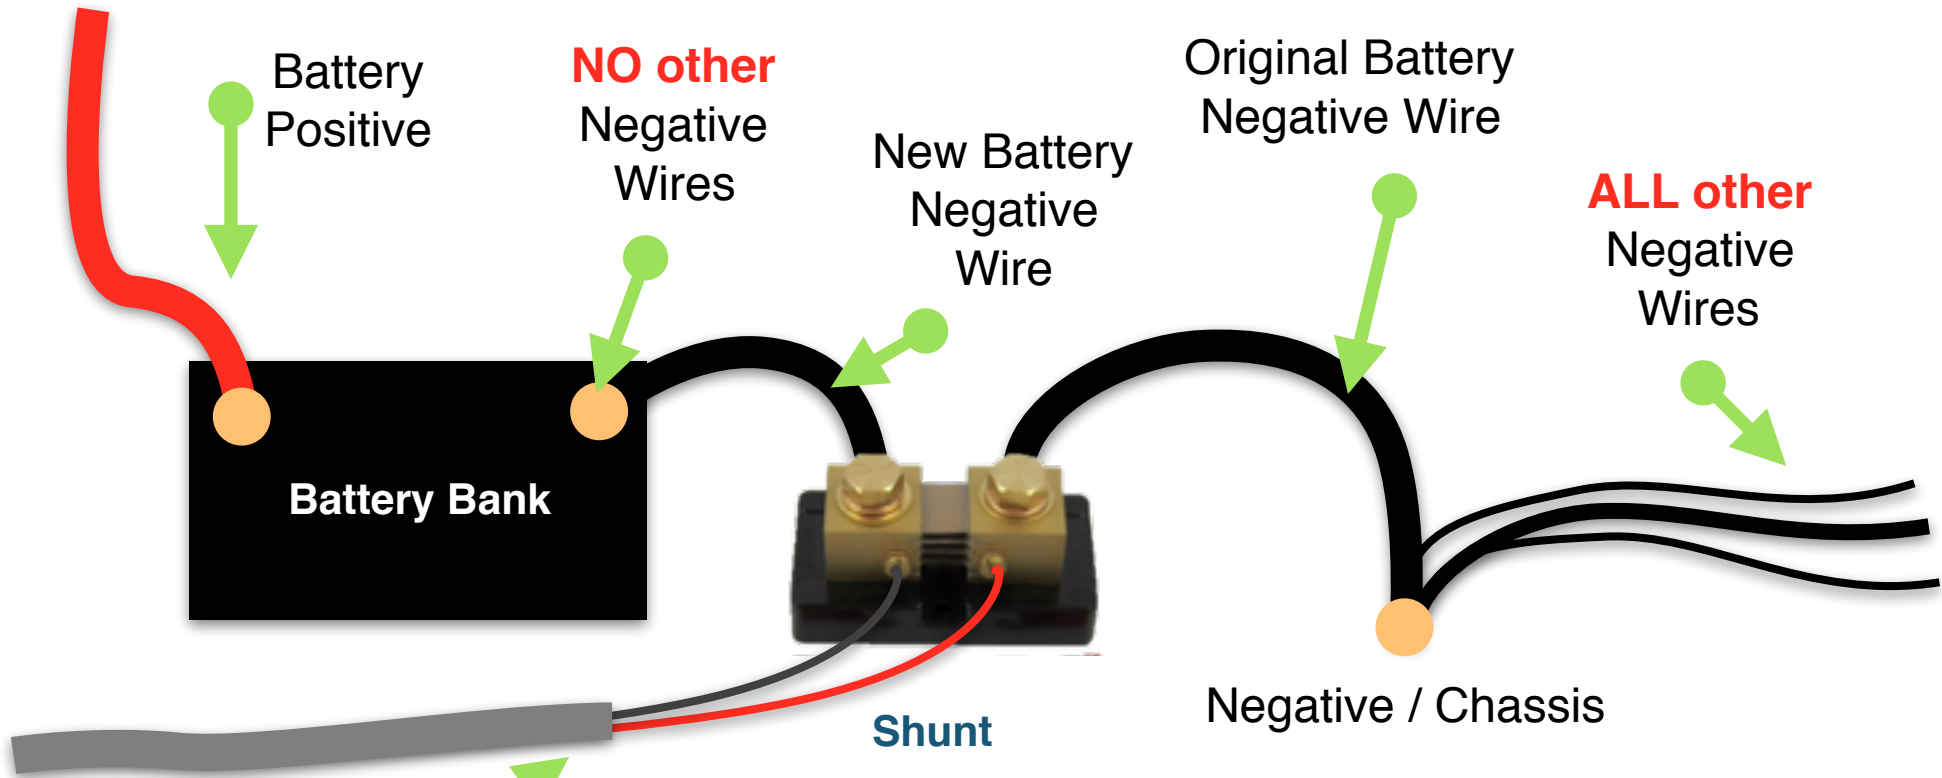

Shunt
Sensor
Cable

1. Remove ALL wires from the Battery Negative.
2. Connect ONLY Battery Negative wire to SHUNT
3. Connect ORIGINAL Battery Negative to OTHER side of SHUNT
4. Connect ALL other Negative wires to chassis (or chassis side of SHUNT)

All current entering/exiting the battery must pass through the shunt.