Programming: Magnum ME-RC Remote for Lead Acid Batteries



Programming Your Magnum Inverter with the ME-RC Remote for use with Lead Said Batteries

Press the Setup button to enter the following sections:

- 1. Search Watts Off
- 2. LowBattCutOut Adjust to 10.5
- 3. **Batt AmpHrs** Enter the Ah for your battery bank
- 4. **Battery Type** Adjust to Custom
 - -Absorption xxx
 - -Float xxx
 - -Equalize xxx
 - -Absorption time: xxx
- 5. Charge Rate Leave at 80%
- 6. VAC Dropout Leave at 80
- 7. Power Saver Leave at 15 min
- 8. Screen Setup Leave at defaults

Press the meter button to return to the default screen.



Menu

Buttons

ME-RC Remote



LCD

Display








Rotary

SELECT Knob



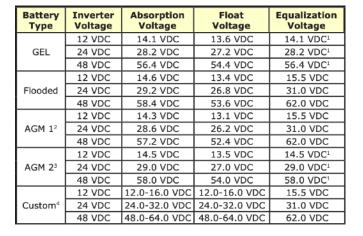

Default Values

Menu Items		Default Settings
SHORE Pushbutton		Shore Max = 30A
SETUP Pushbutton	01 Search Watts	Search = 5W
	02 LowBattCutOut	LBCO = 10.0 VDC (12-volt models), 20.0 VDC (24-volt models); or 40.0 VDC (48-volt models).
	03 Batt AmpHrs	Batt Amphrs = 400 AmpHrs (Absorb Time = 90 minutes)
	04 Battery Type	BatType = Flooded
	05 Charge Rate	Max Charge = 80%
	06 VAC Dropout	Dropout = 80VAC
	07 Power Save	PwrSave = 15min
	08 Screen Setup	Contrast =100%
		Brightness =50%

Shore button: When pressed, you can adjust the incoming current limit. Be sure to set this to 15A or lower if you are connecting at home.